 


TV Unit

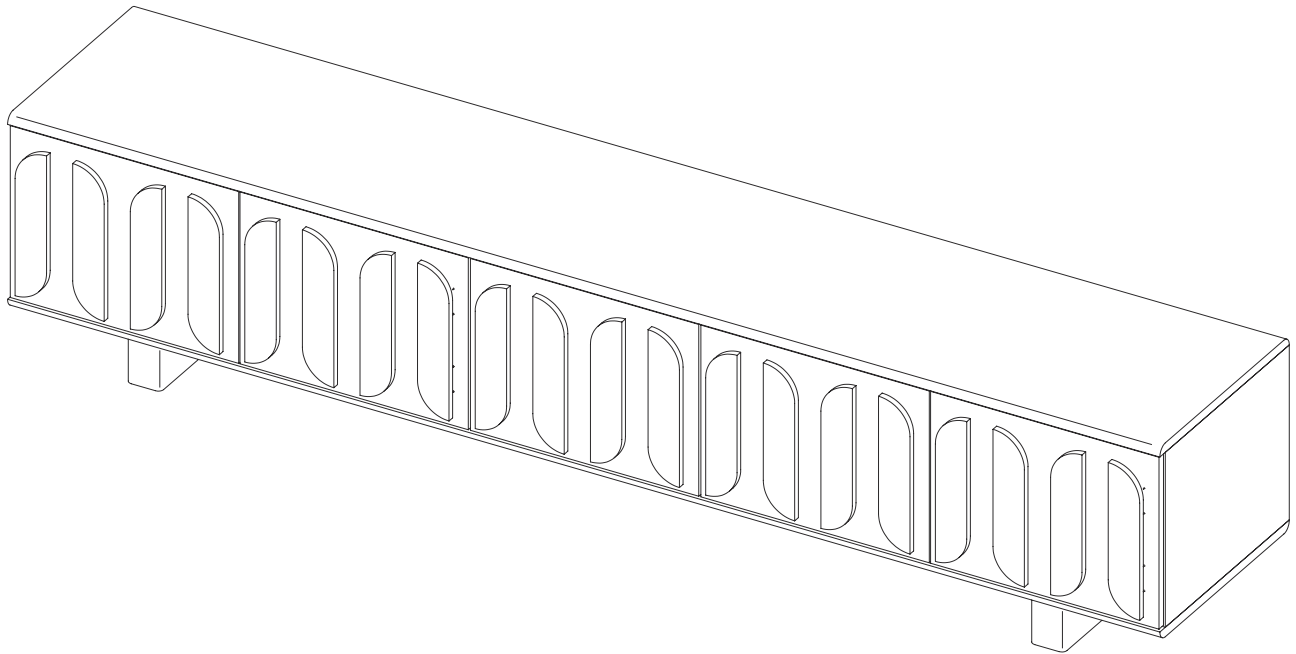

Assembly requires at least 2 persons



Extra tools you may need

 
USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT INVALIDATES ANY CLAIM AS IT MAY DAMAGE THE PRODUCT MAKING IT UNSAFE TO USE.



THANK YOU FOR YOUR PURCHASE!


We hope you enjoy this product as much as we enjoyed making it!

We suggest you spend **5 minutes** in reading these tips before assembling the unit. Strictly follow the instructions step by step.

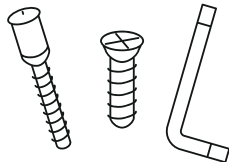


Tool Check

 Check contents to ensure that you have the specified quantity for all identified parts and metal fittings.

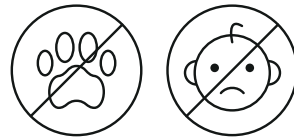


Safety Check

 Keep children and pets away from working area as unit has small parts that are choking hazards if swallowed.

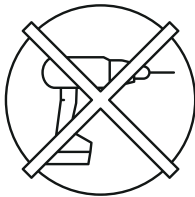

Do Not Use Power Tool

 Do not use any power tool for assembly as it may damage the unit and make it unsafe to use. Use of any power tool will invalidate any claim you may have.

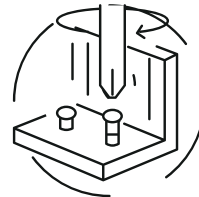


Easier Assembly Tip

We strongly advise that all fittings be finger-tightened during the initial assembly phase. You may fully tighten them all once assembly is complete.

HARDWARE LIST


Please check if you have all the fittings and tools listed below.

 A



HAT SCREW
50 PCS

 B



ECCENTRIC HAT
50 PCS

C



 
Ø 8x30mm DOWEL LAYERED BOARD SUPPORT
8 PCS

D




12 PCS

E




HINGE
4 PCS

 F




HINGE
6 PCS

 G




Ø4x16mm SCREW
72 PCS

 H

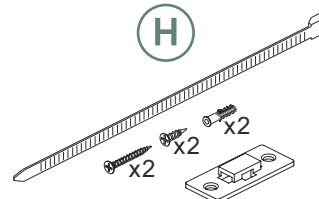


ANTI-TIP SAFETY KIT
2 PCS

 J




BACKPLATE BUCKLE
10 PCS

 K




Ø 3.5x14mm SCREW
20 PCS

 L




DOOR HOLDER
4 PCS

 M



DOOR HOLDER
2 PCS

 N

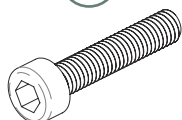


M8x40 BOLT
4 PCS

P




Ø8 WASHER
4 PCS

 Q



FOOT PAD
1 PC

 R




IRON SHEET
10 PCS


S



 
ALLEN KEY
1 PC

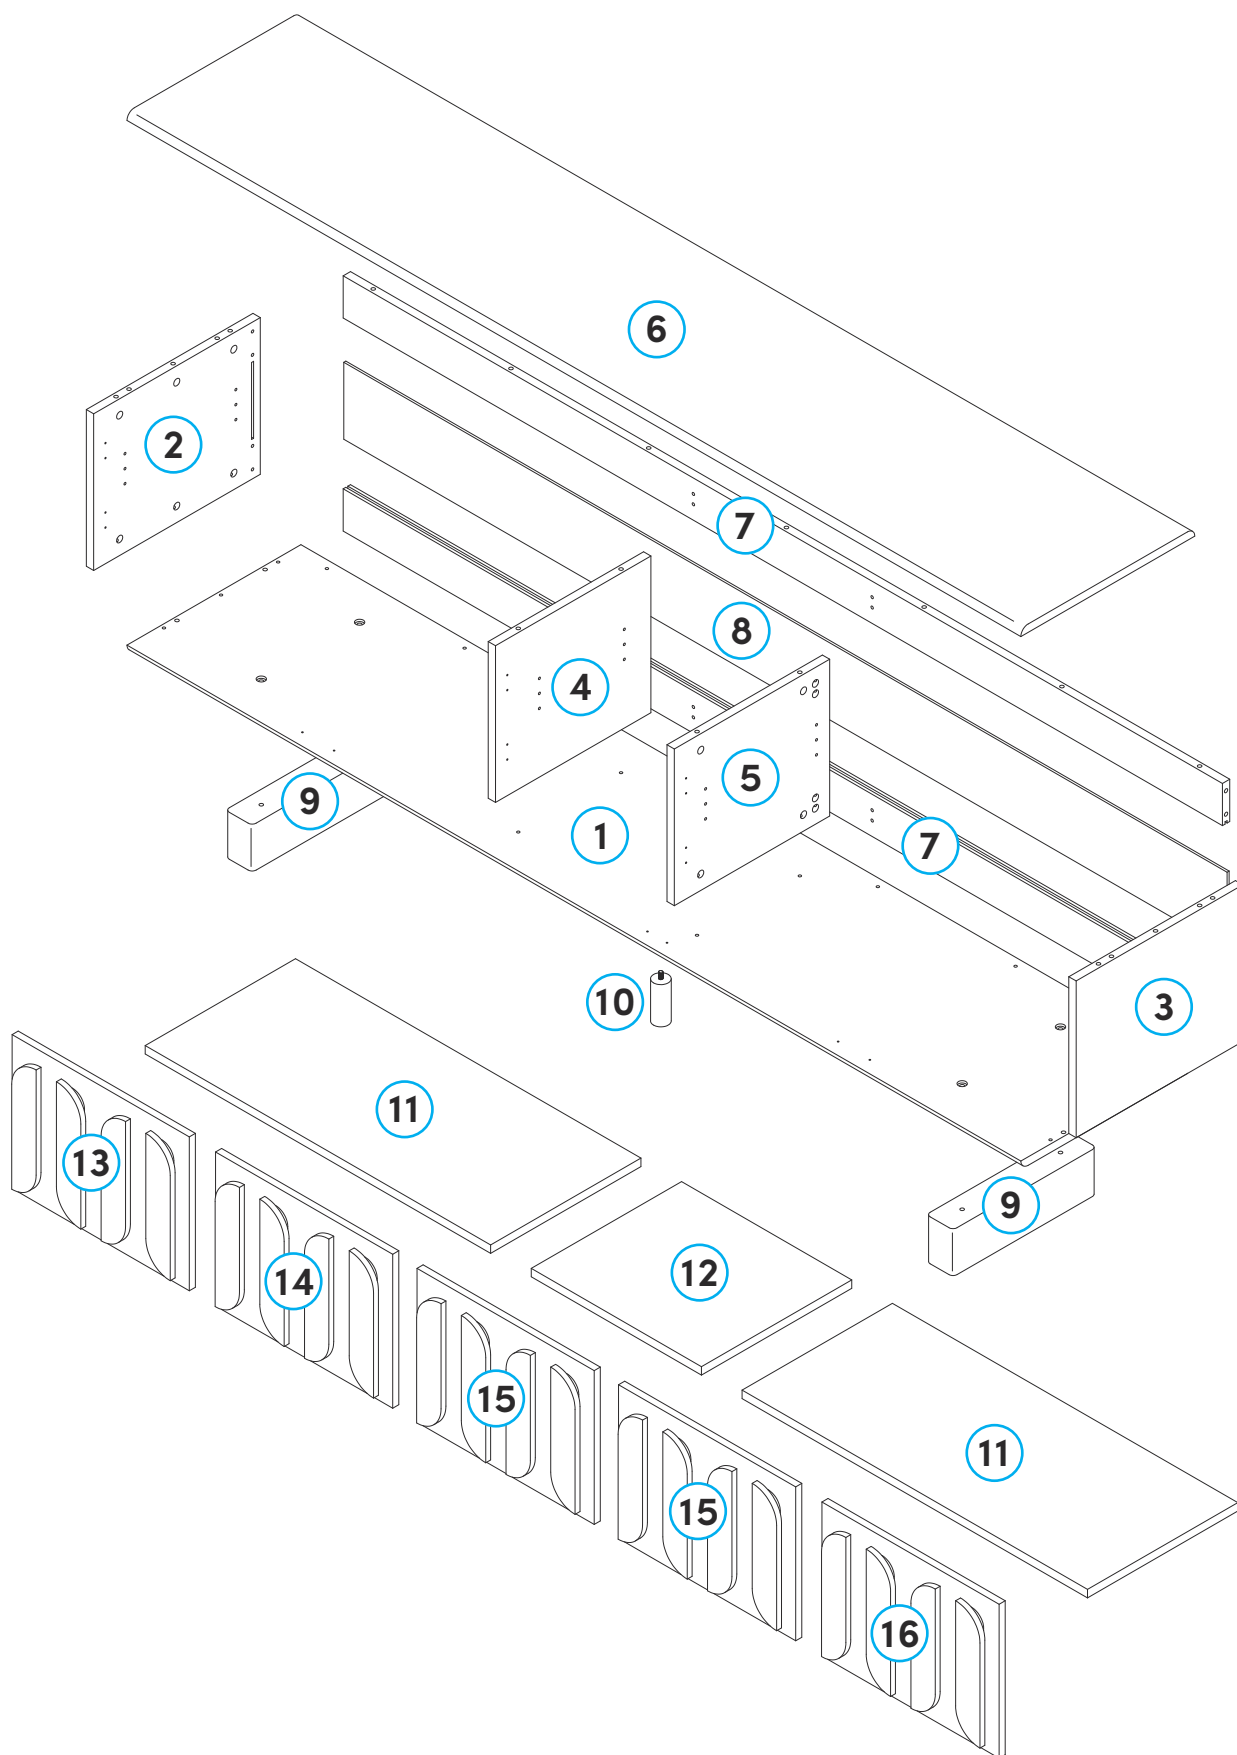


PARTS LIST

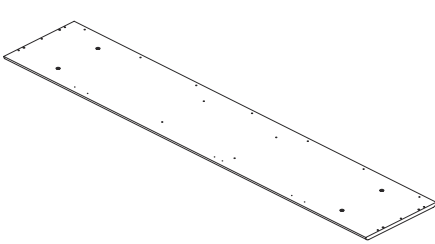 


1 x1

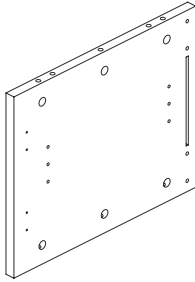 


2 x1

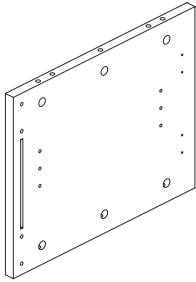 


3 x1

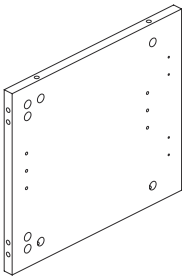 


4 x1

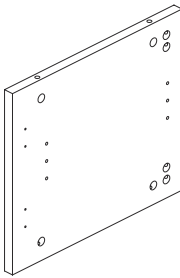 


5 x1

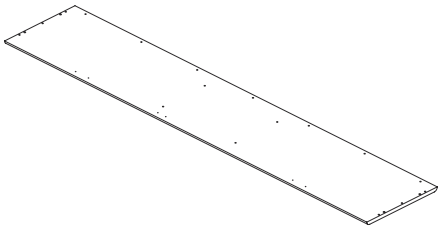 


6 x1

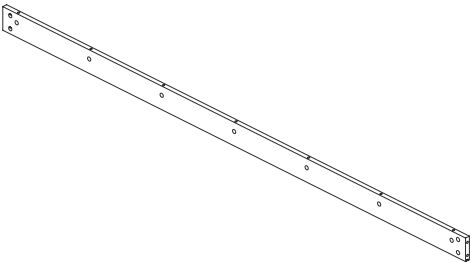 


7 x2

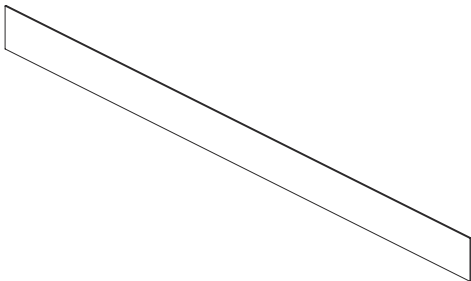 


8 x1

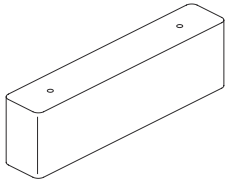 


9 x2

 

10 x1

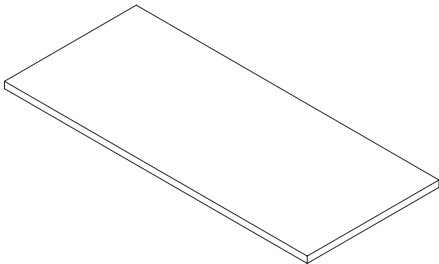 


11 x2

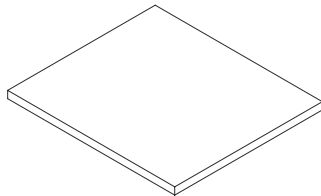 


12 x1

 
PARTS LIST

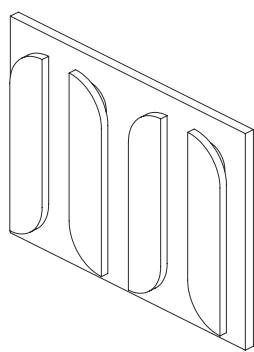


13 x1

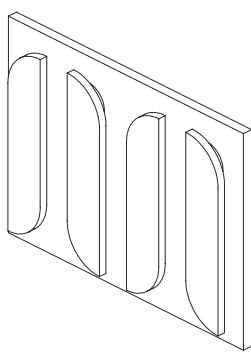 

14 x1

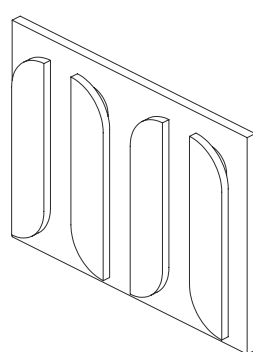 


15 x2

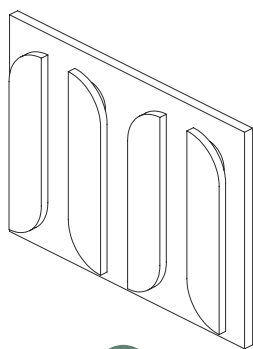 


16 x1

 STEP 1

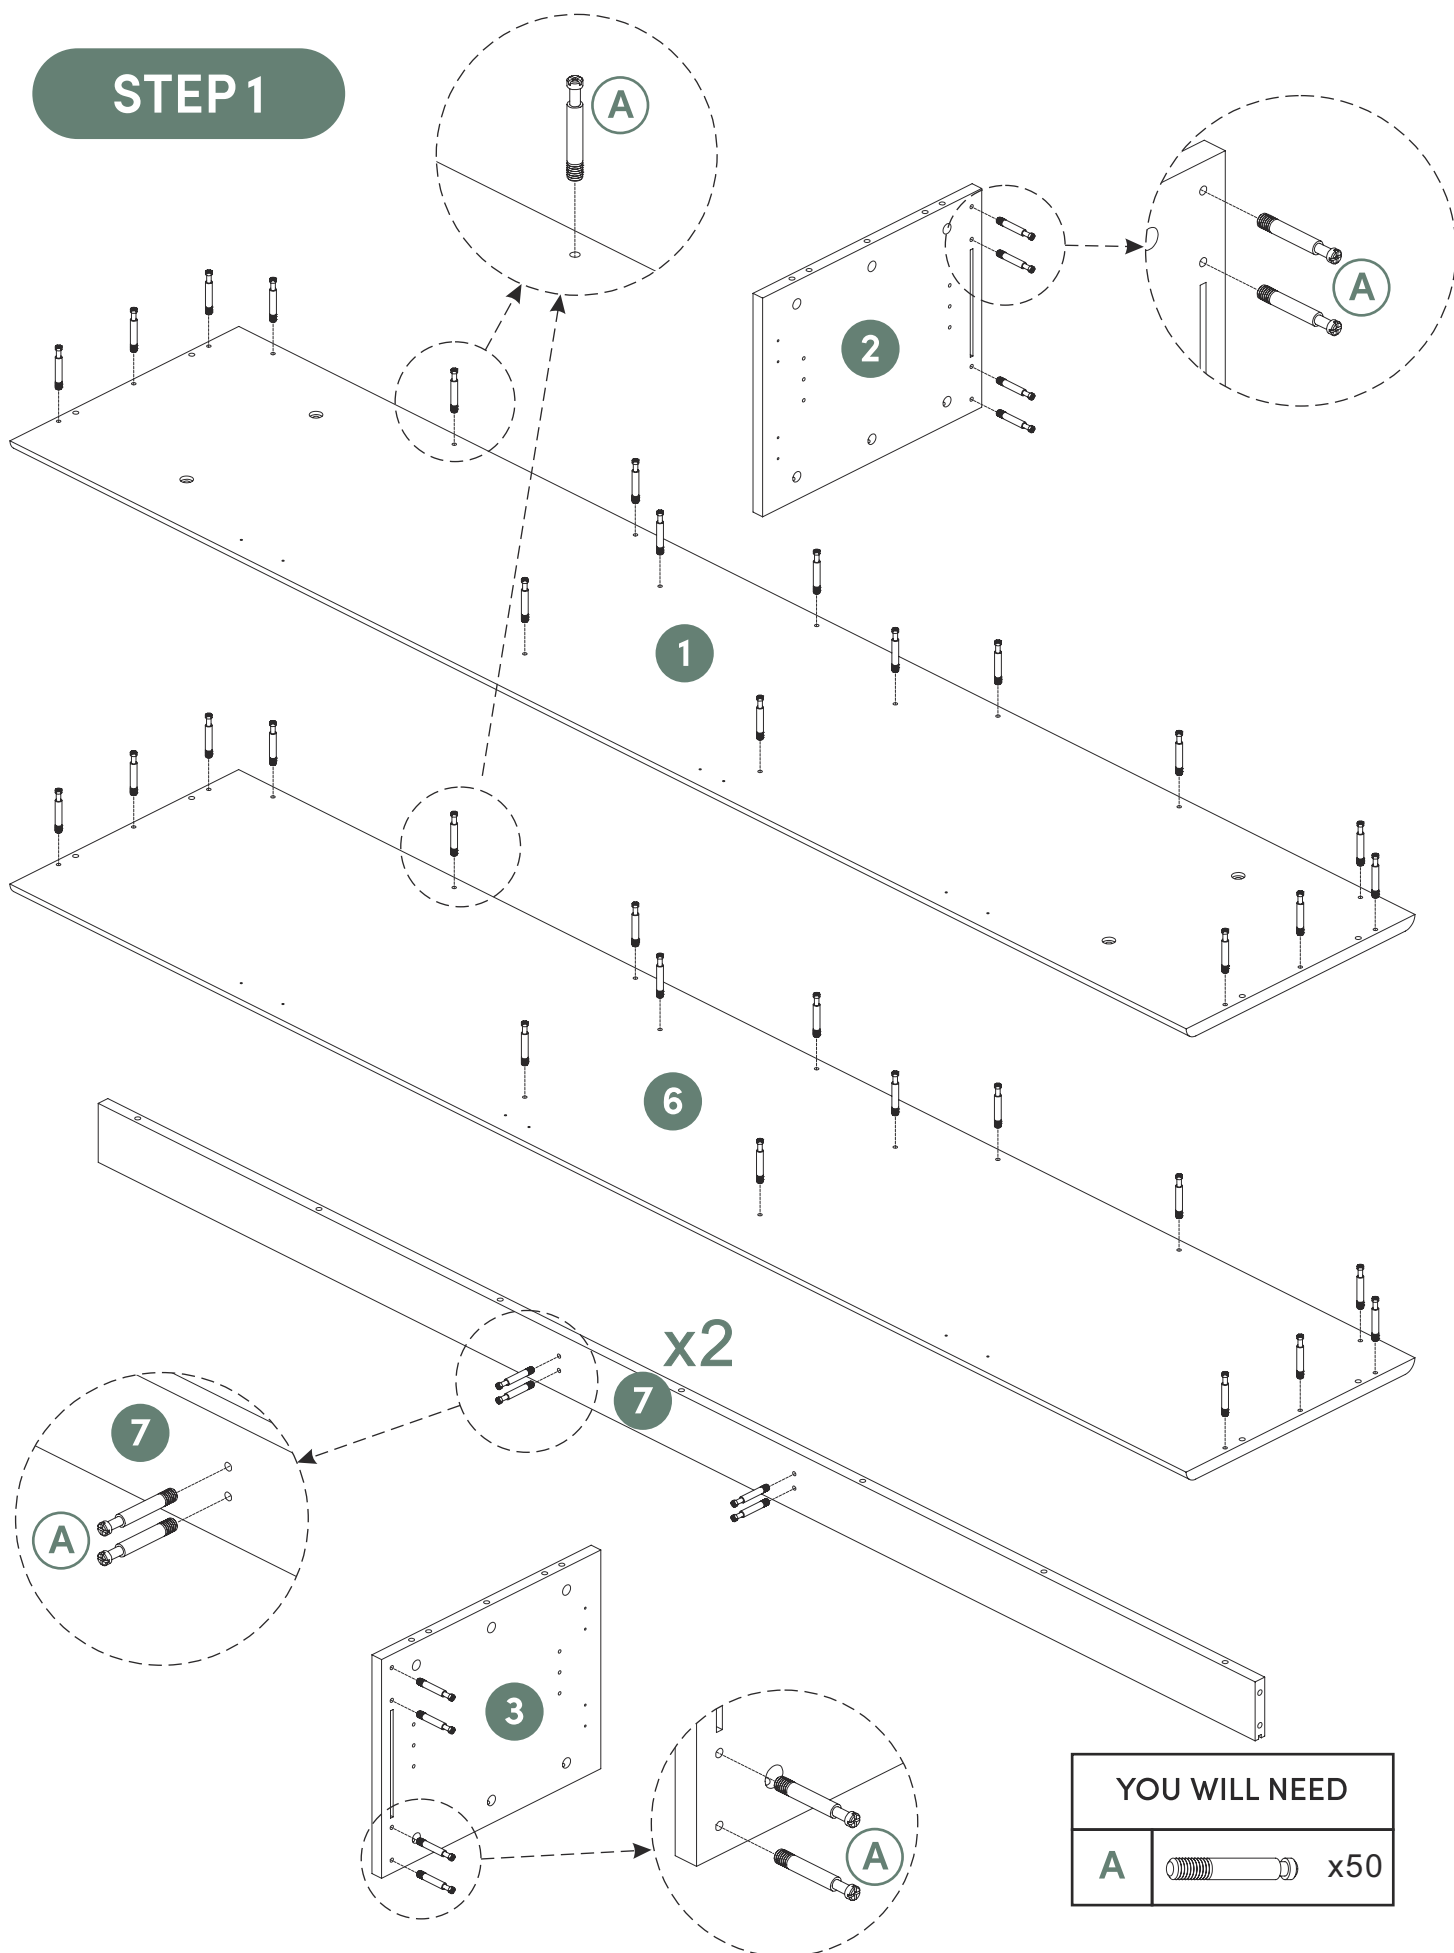

YOU WILL NEED

 
A




x50

ASSEMBLY STEPS

 STEP 2

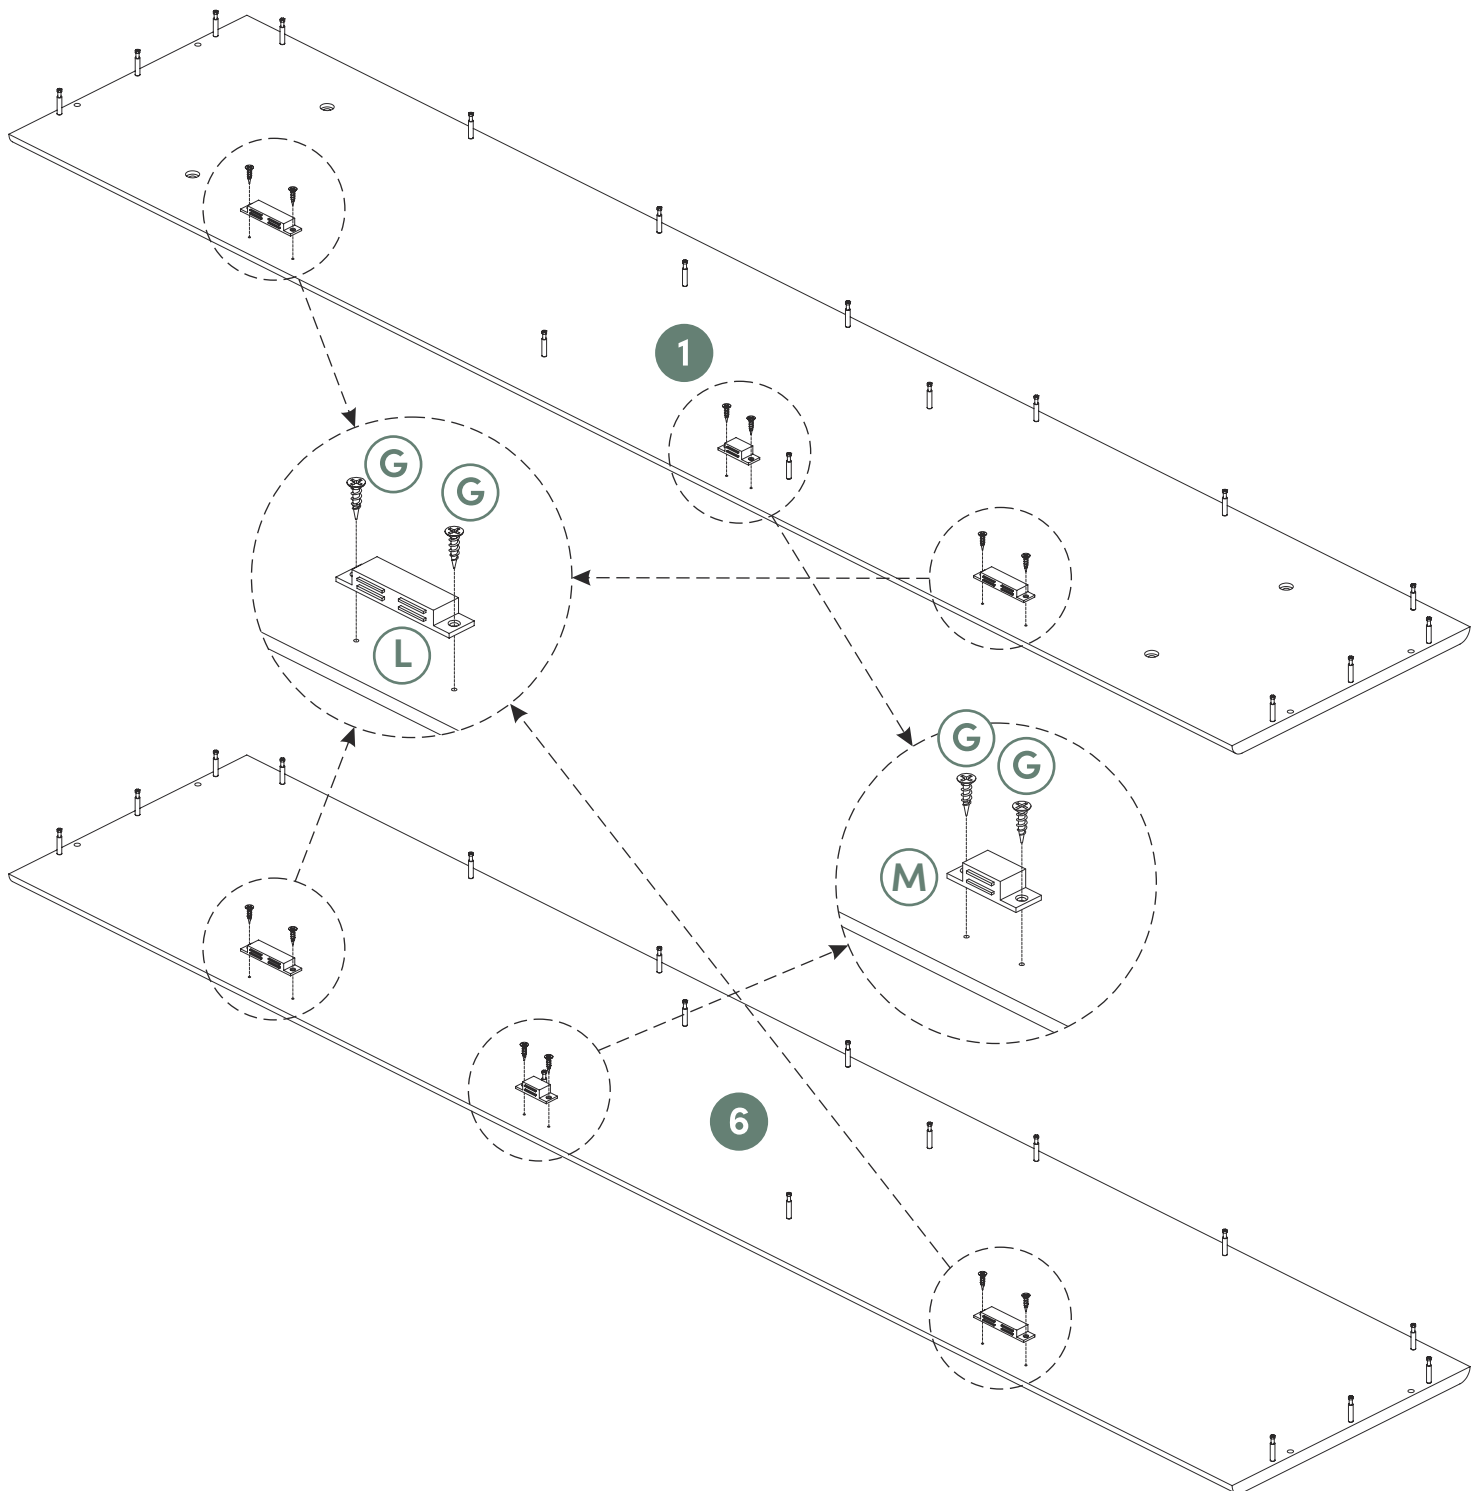


YOU WILL NEED

 
L		x4	G		x12
			M		

ASSEMBLY STEPS

 STEP 3

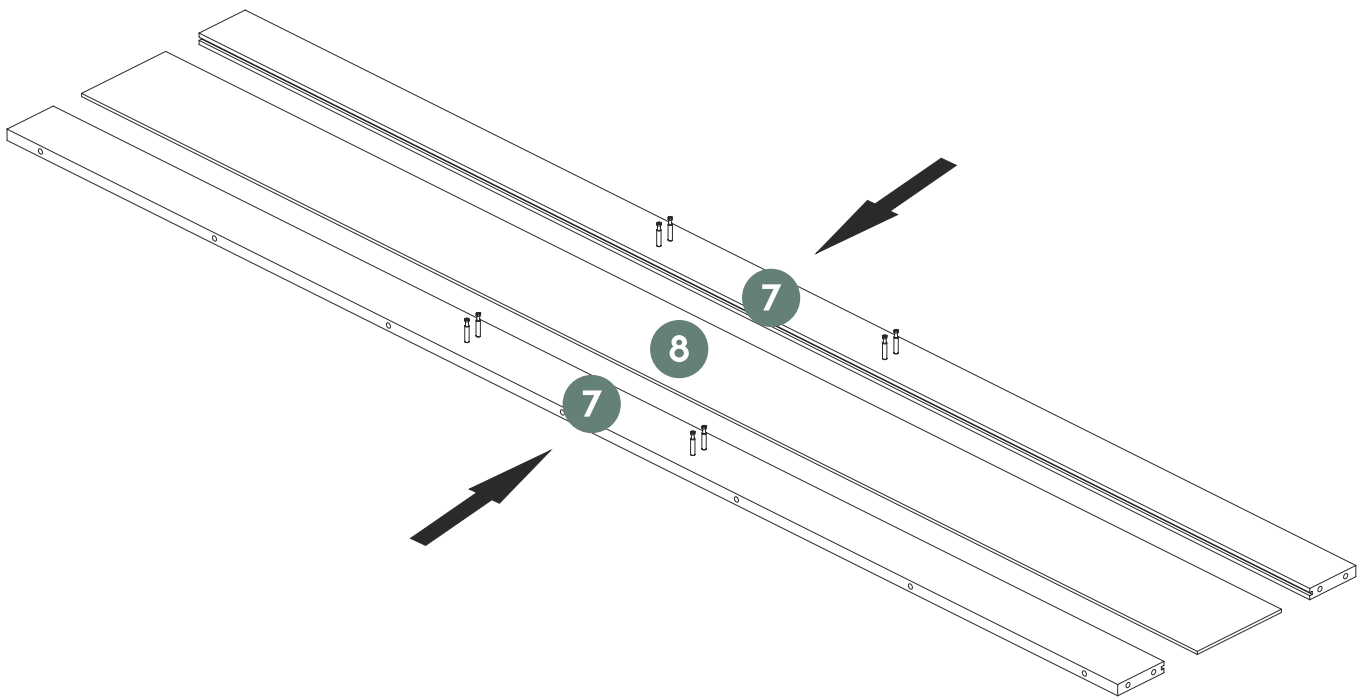

 STEP 4

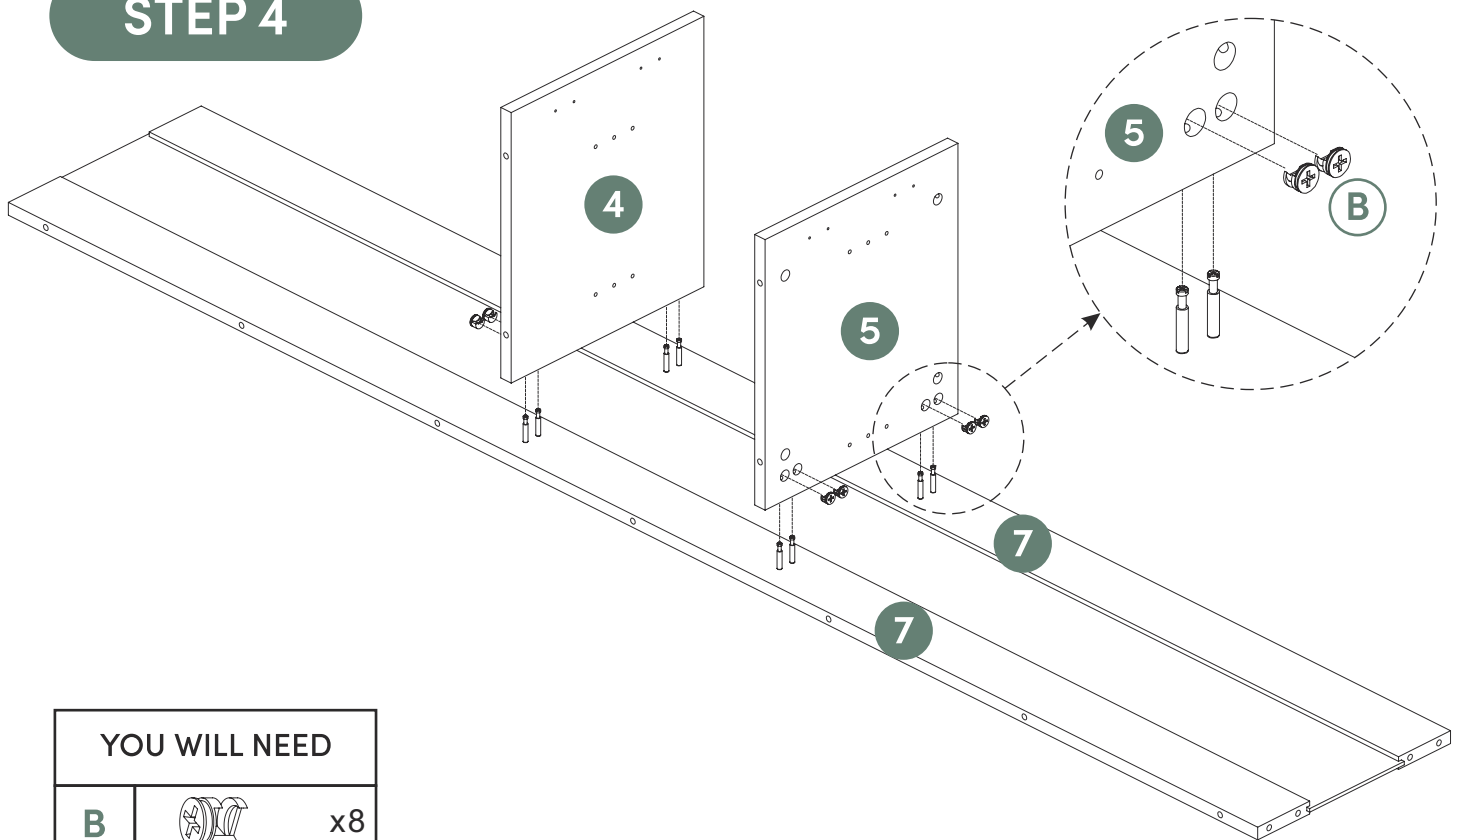

YOU WILL NEED

 
B



x8

ASSEMBLY STEPS

STEP 5

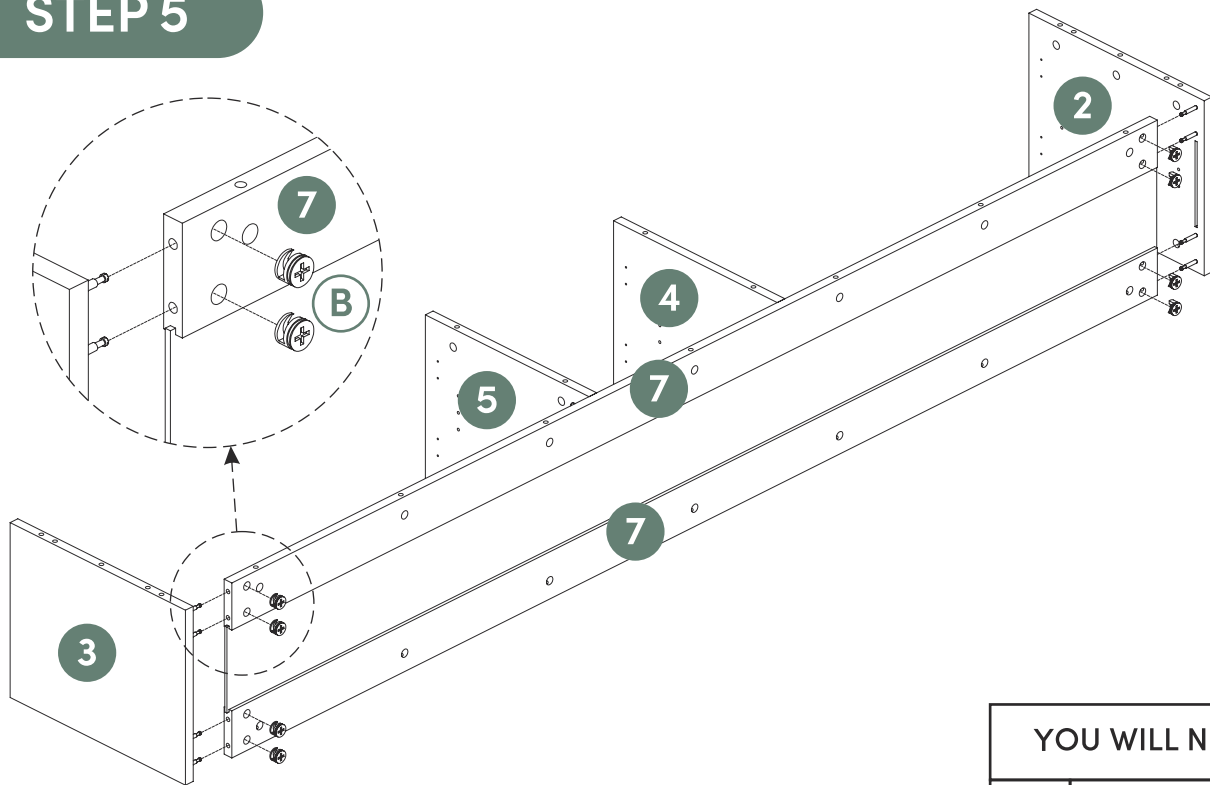


YOU WILL NEED

B




x8

 STEP 6

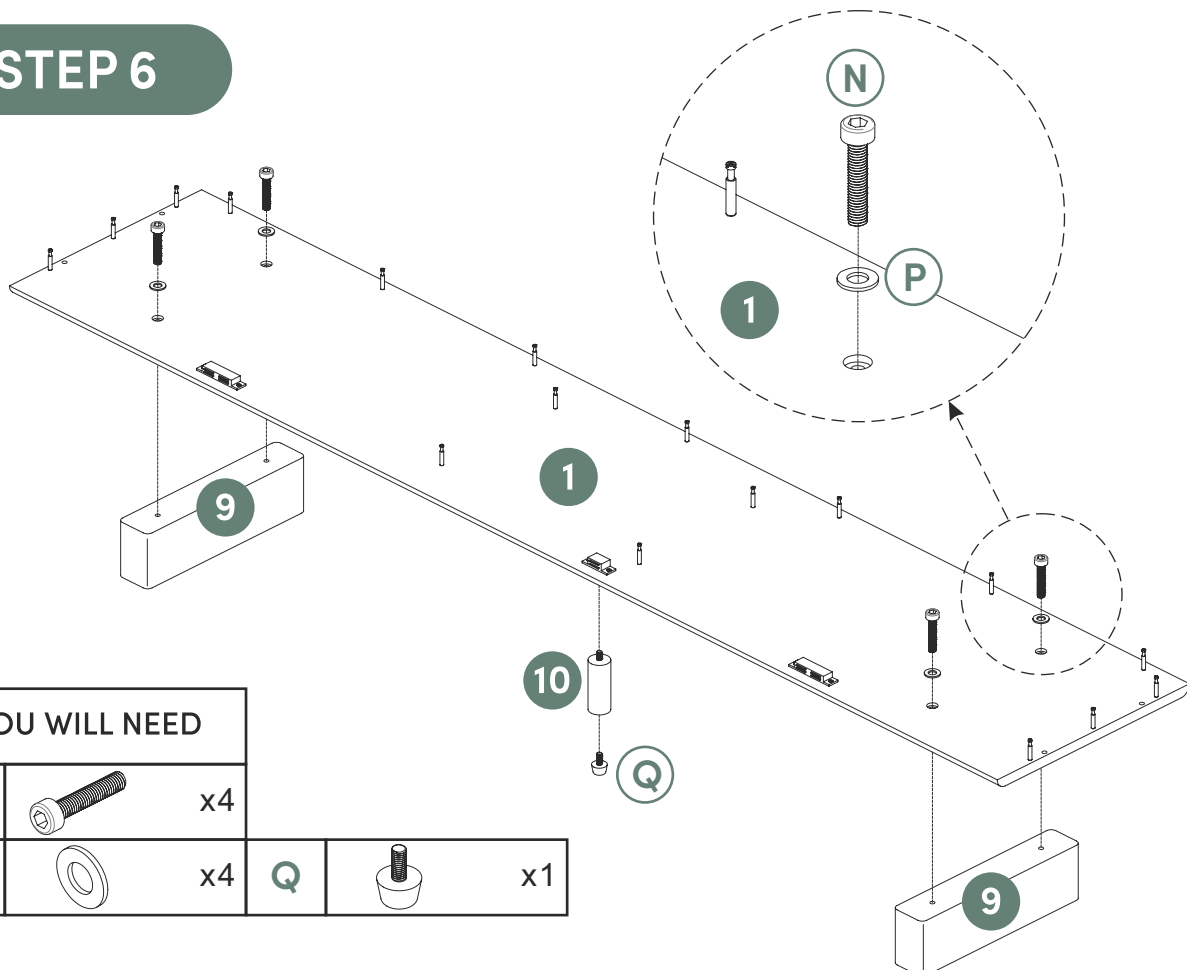

YOU WILL NEED

 N



x4

P



x4

 
Q



x1


ASSEMBLY STEPS

STEP 7

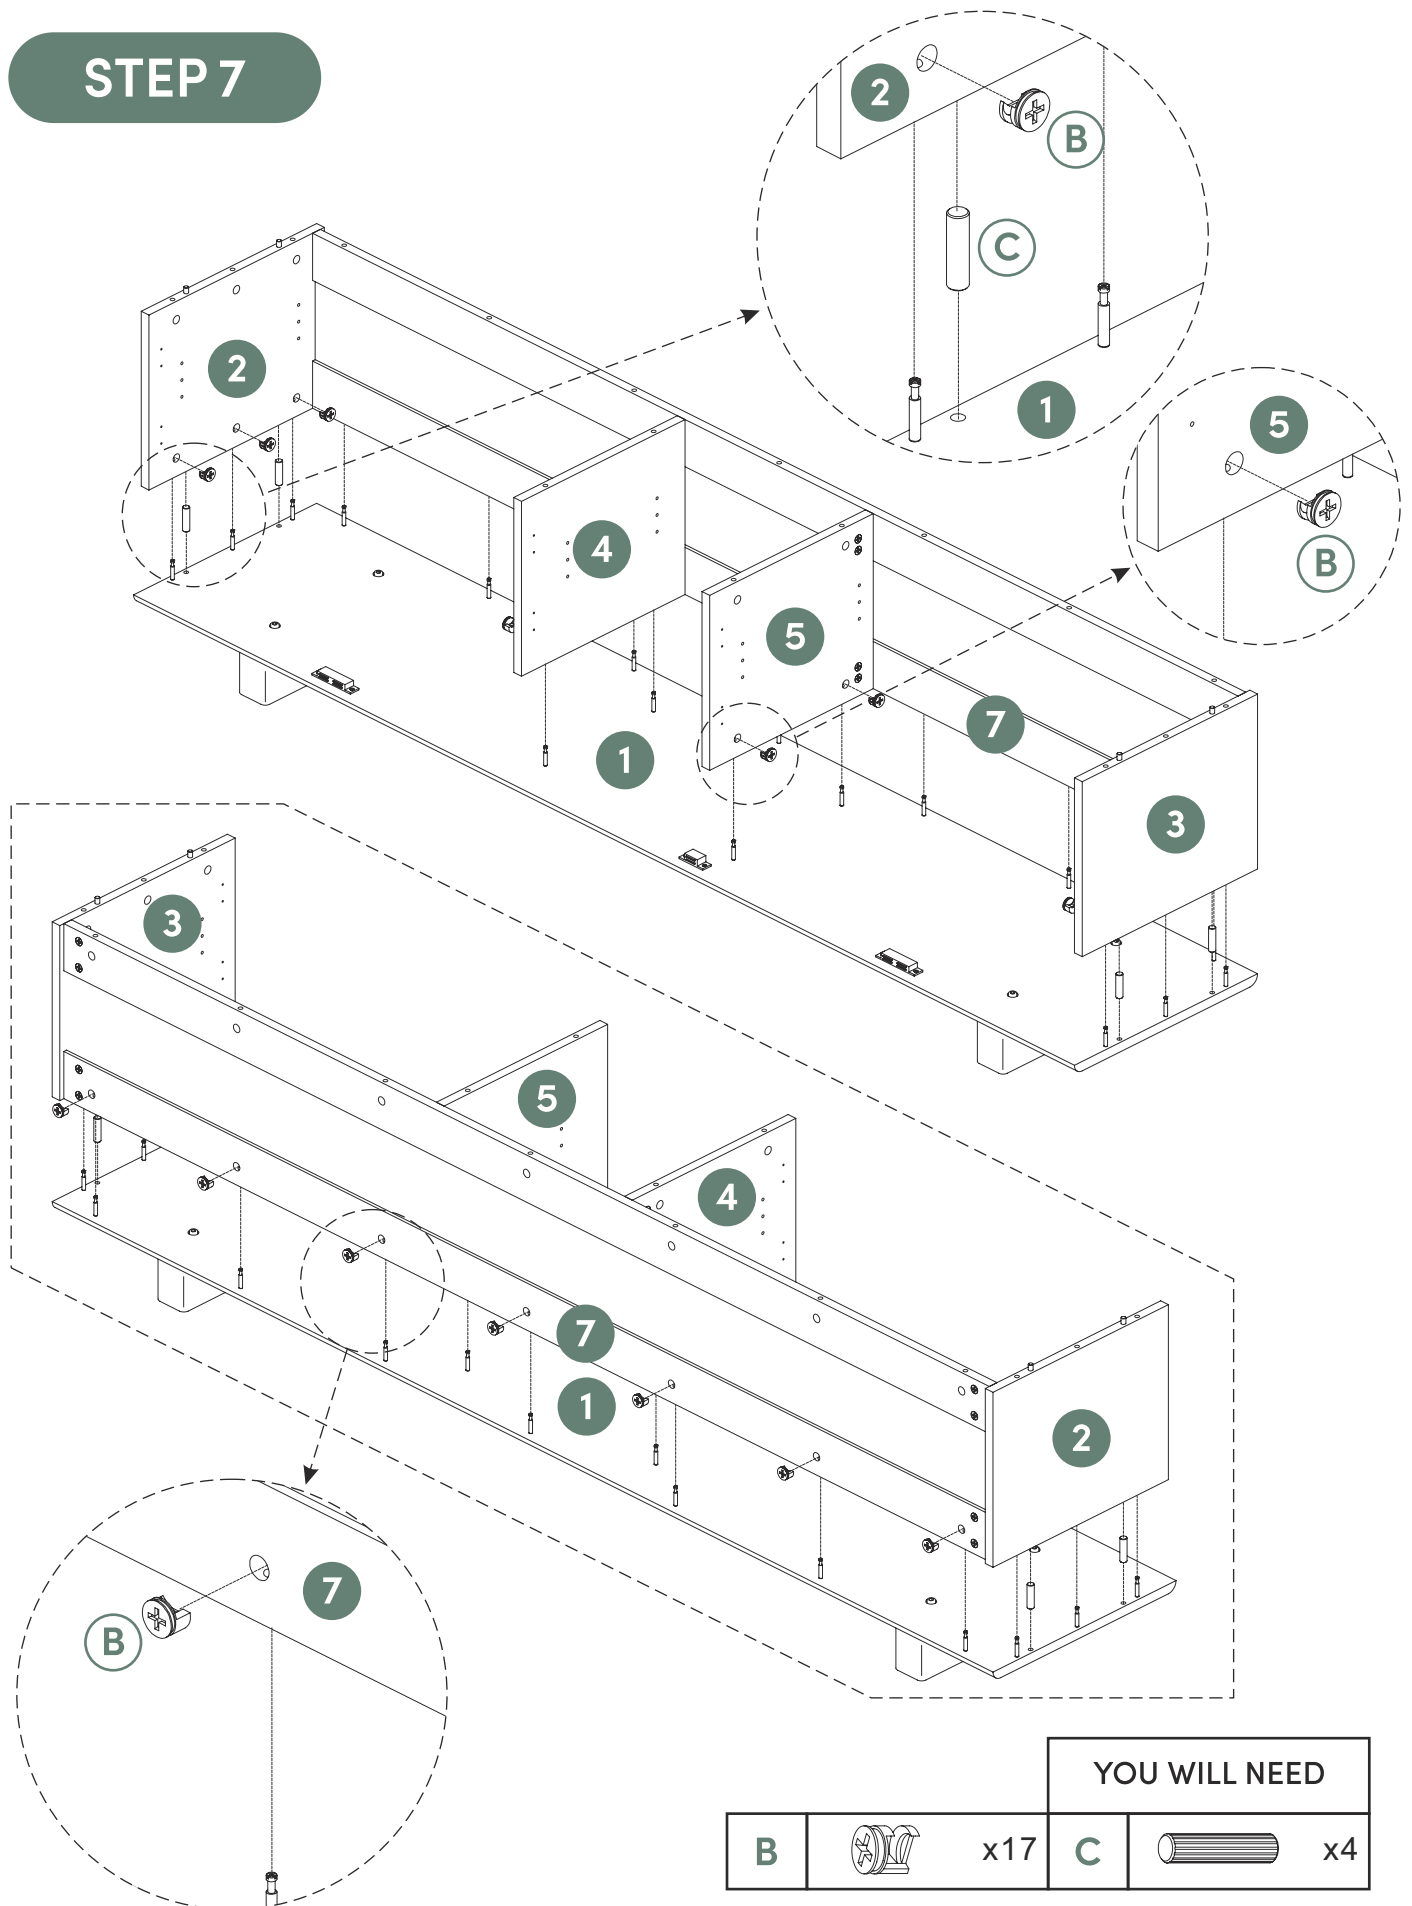

ASSEMBLY STEPS

 STEP 8

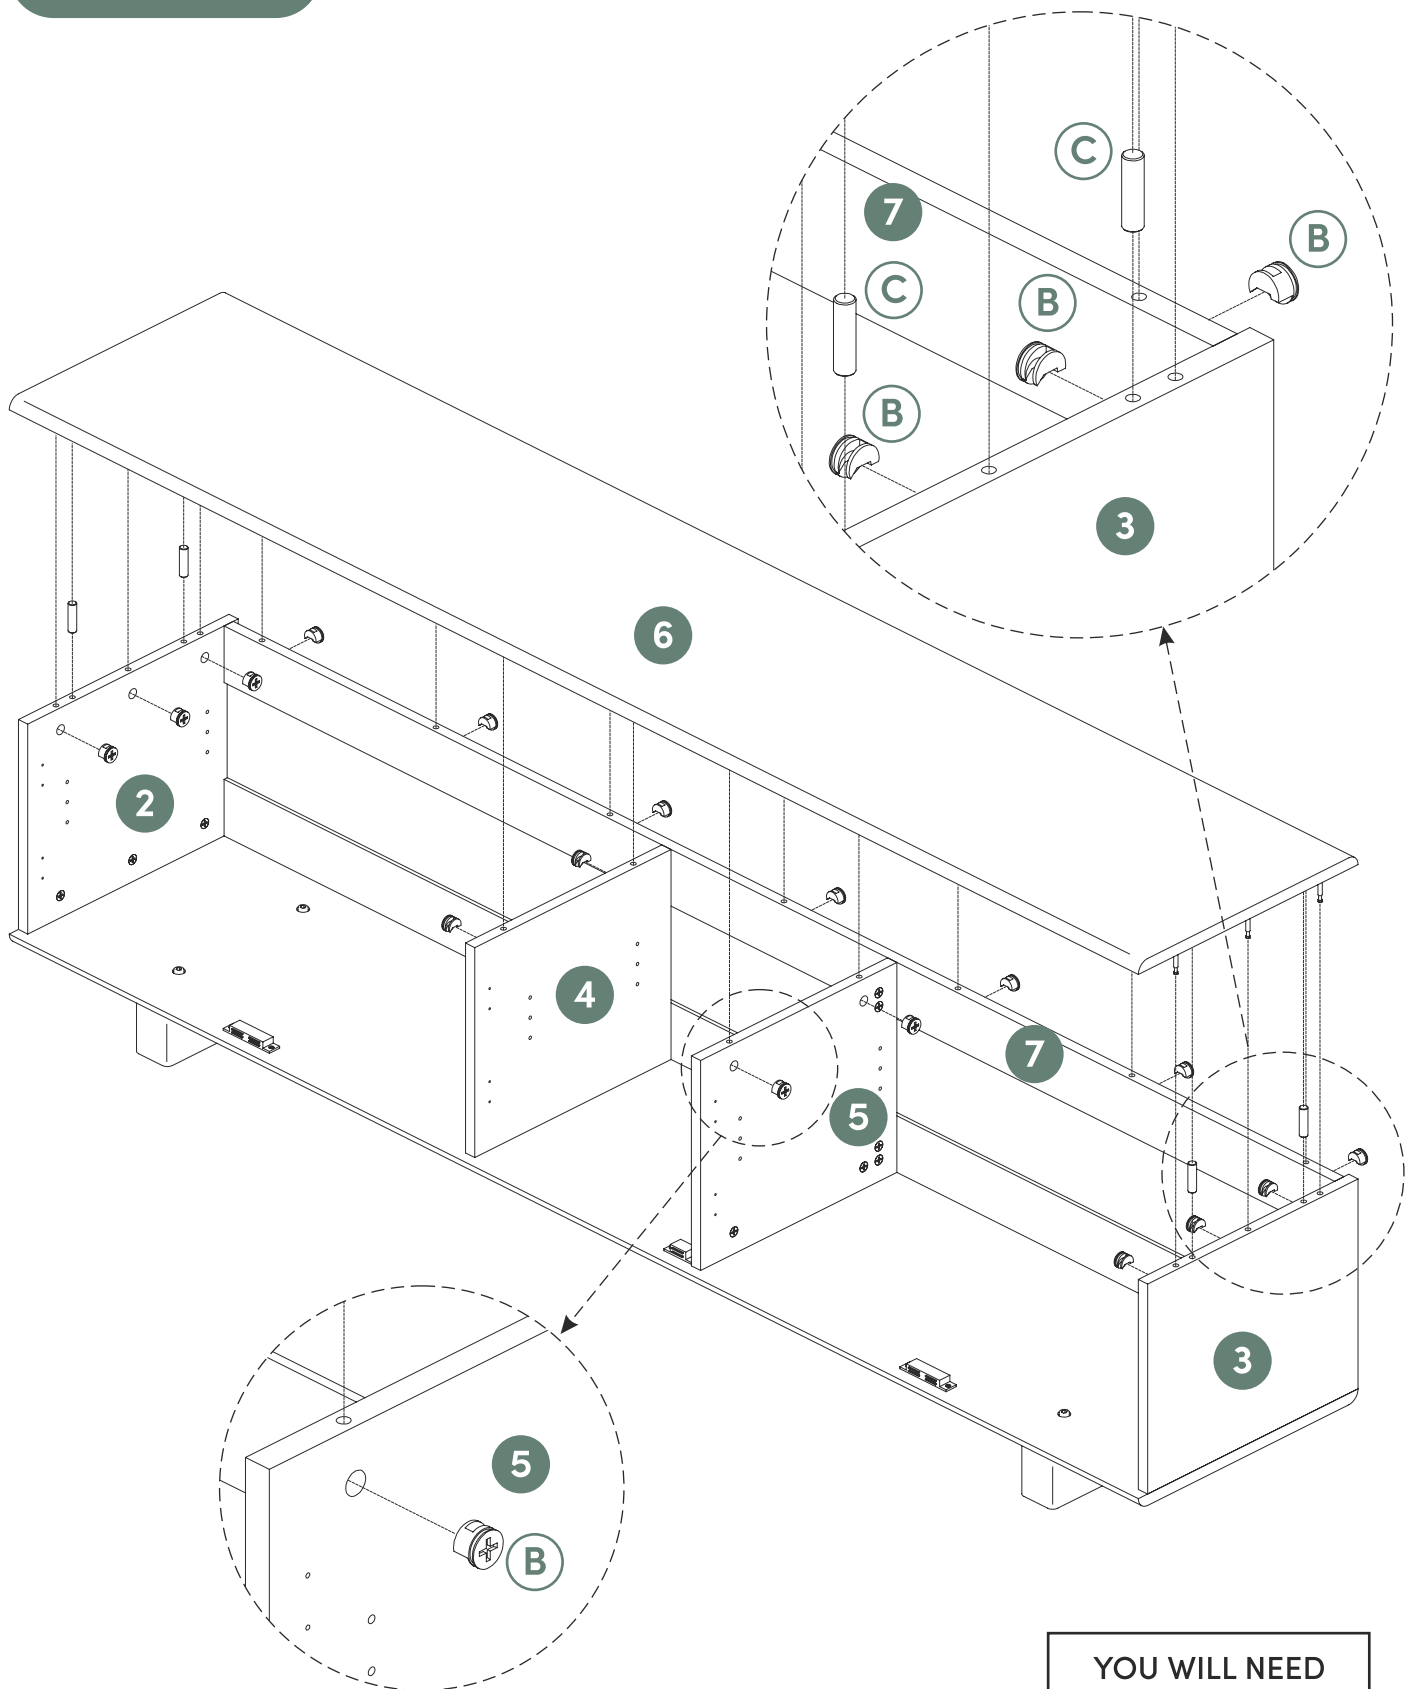


YOU WILL NEED

B		x17	C		x4
----------	--	-----	----------	---	----

ASSEMBLY STEPS

 
STEP 9

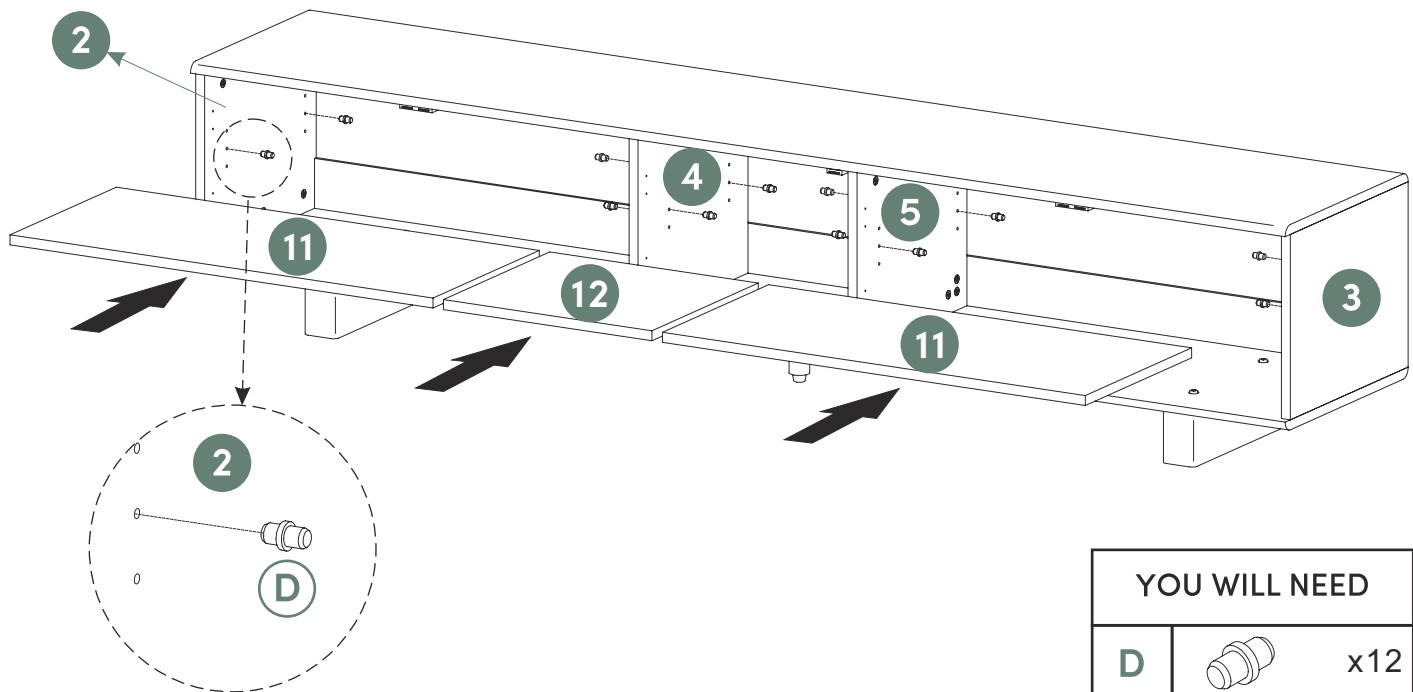

YOU WILL NEED

D		x12
---	---	-----

 STEP 10

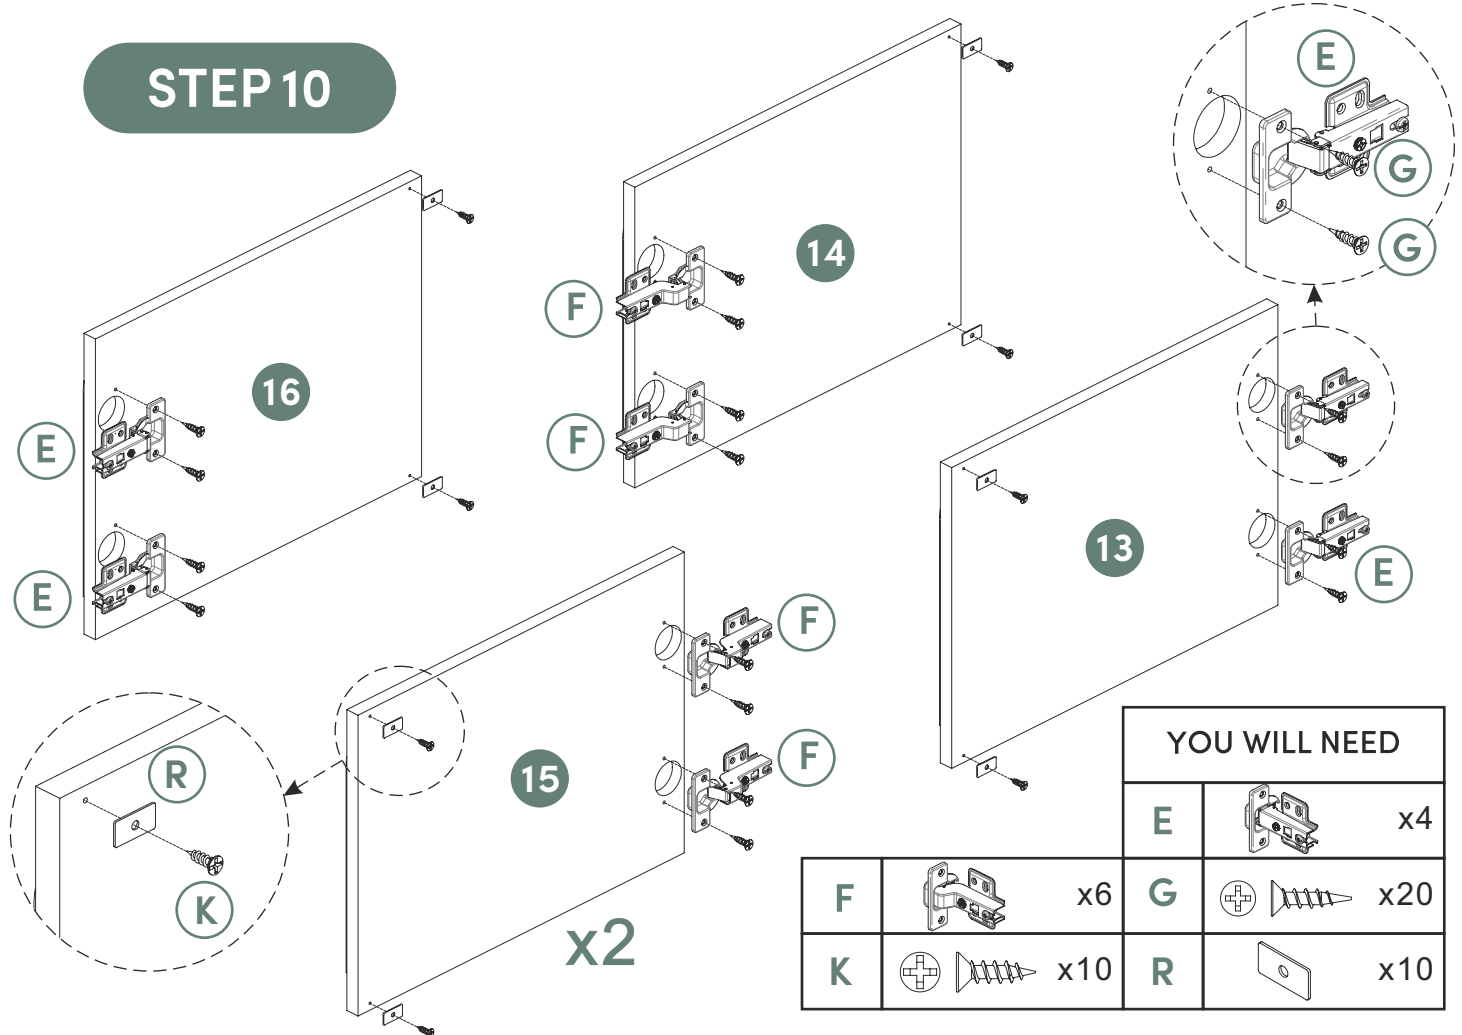


YOU WILL NEED

E		x4
F		x6
G		x20
K		x10
R		x10

ASSEMBLY STEPS

 STEP 11

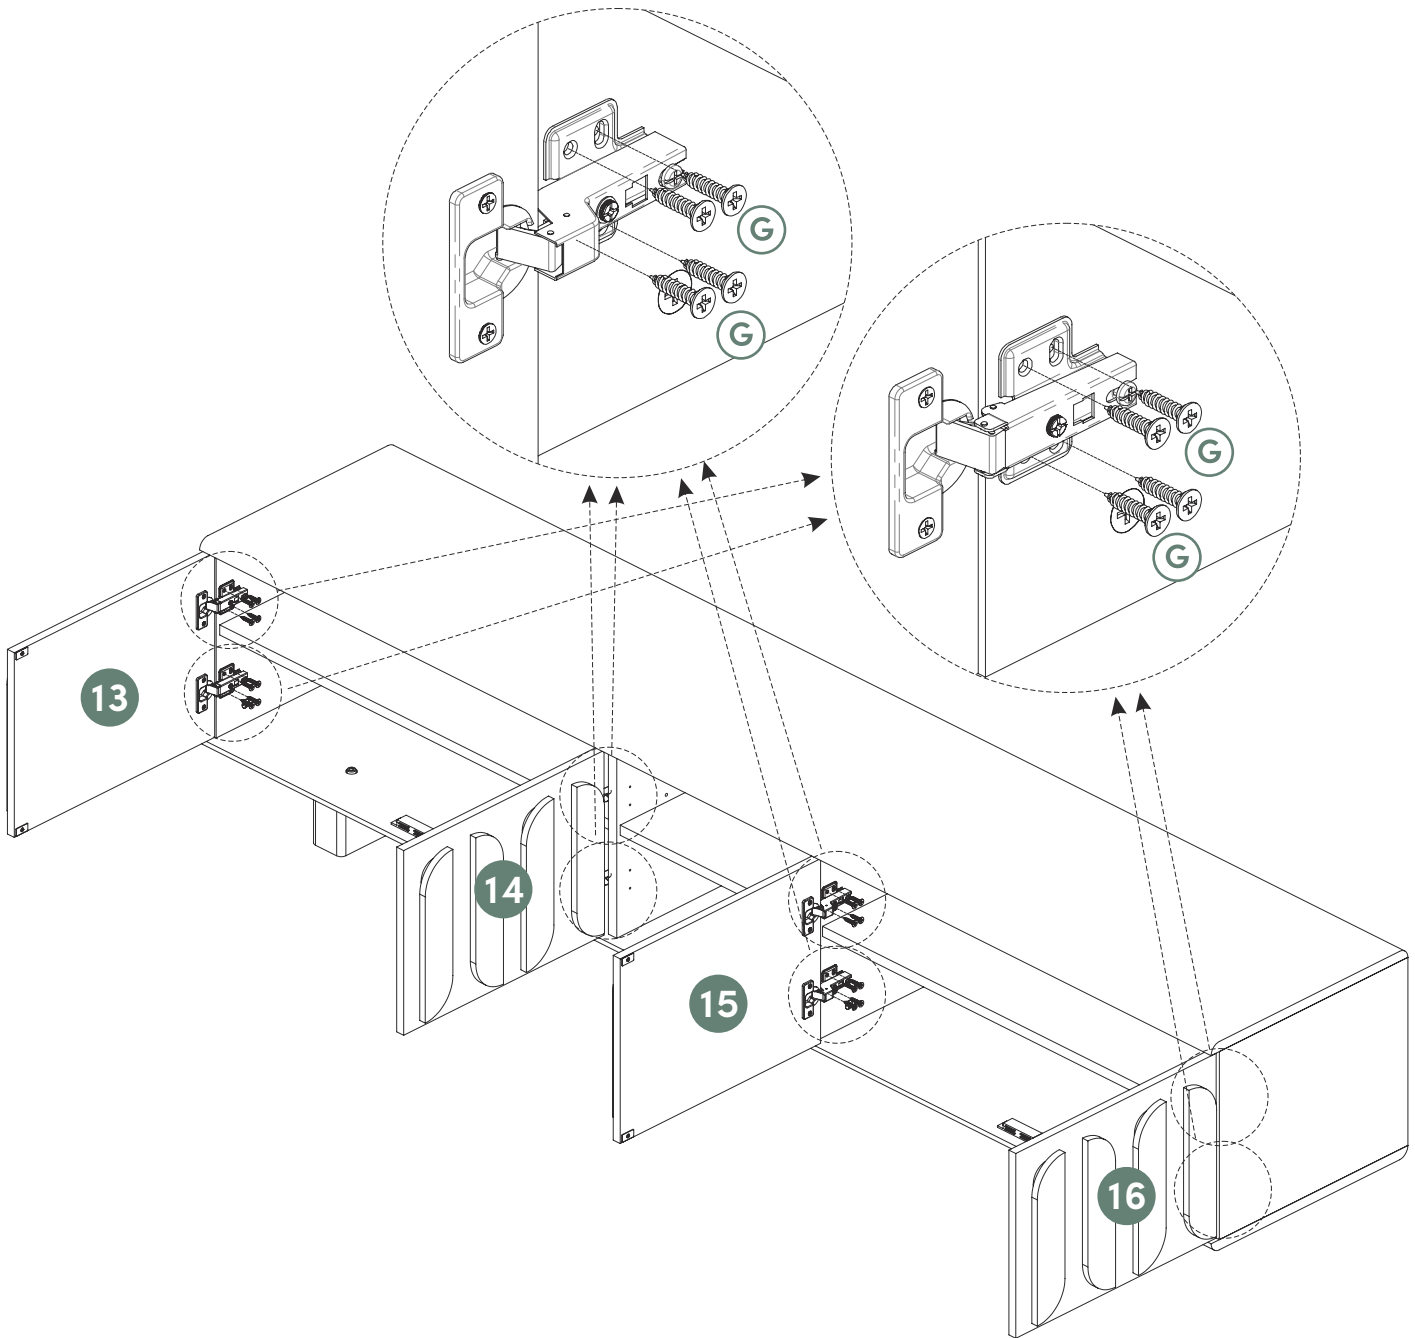

YOU WILL NEED

G

 


x32


ASSEMBLY STEPS

Hinge Adjustment

Left screw adjusts left–right, right screw adjusts in–out (depth), and top screw adjusts up–down.

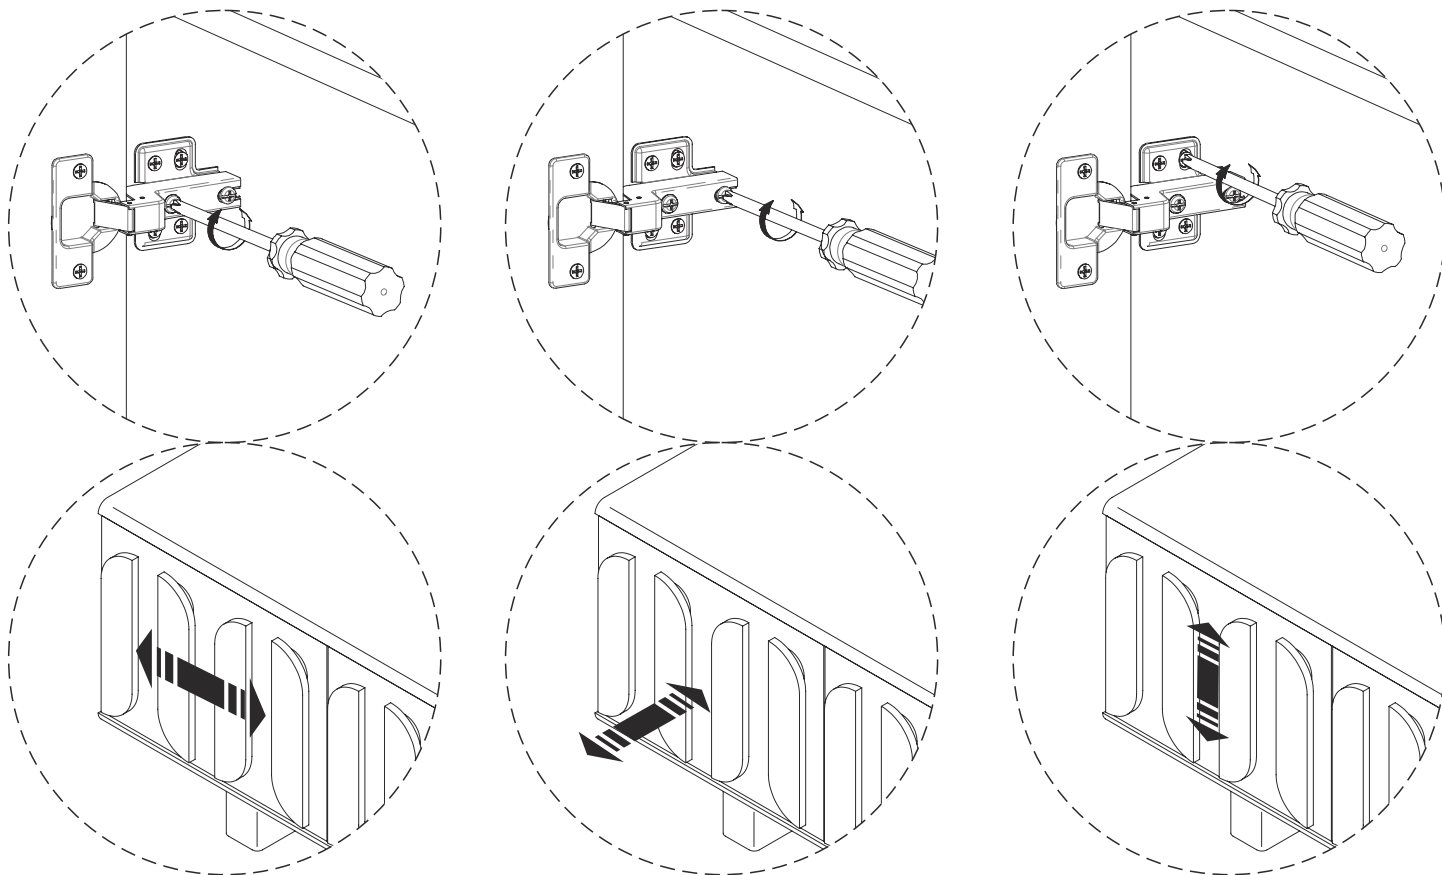

 STEP 12

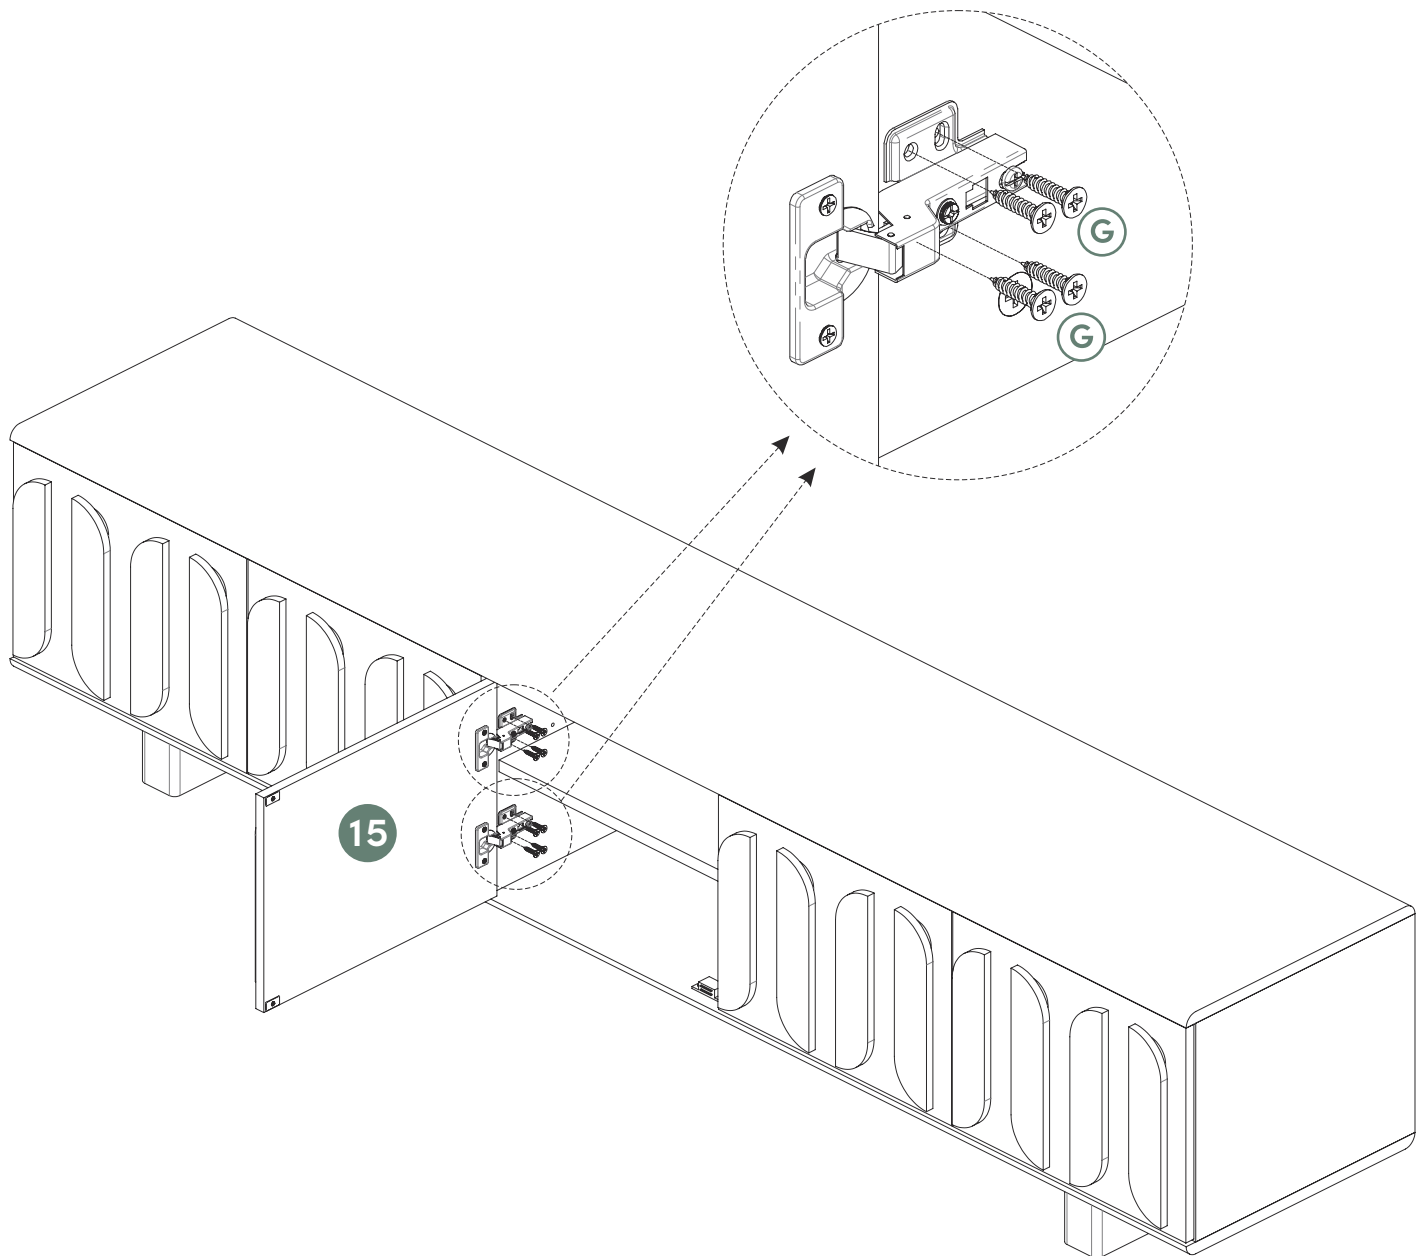


YOU WILL NEED

G   x8

ASSEMBLY STEPS

 STEP 13

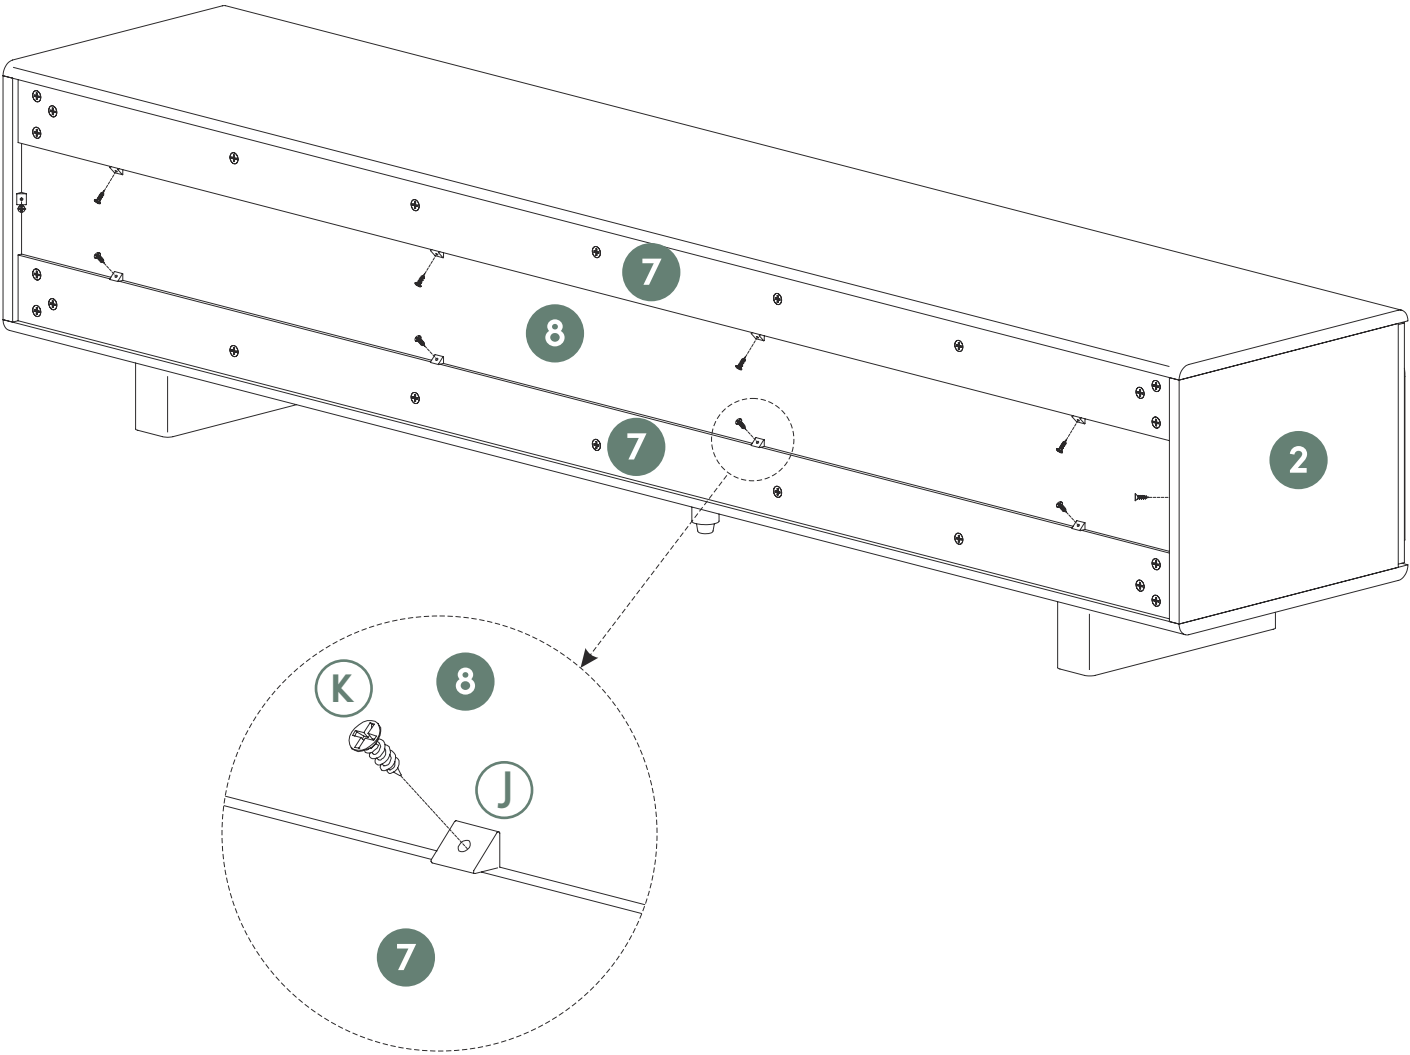


YOU WILL NEED		
J		x10
K		x10



ASSEMBLY STEPS

STEP 14



 
Self provided tools

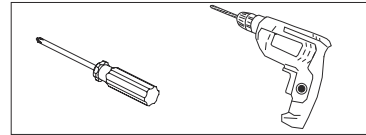



1

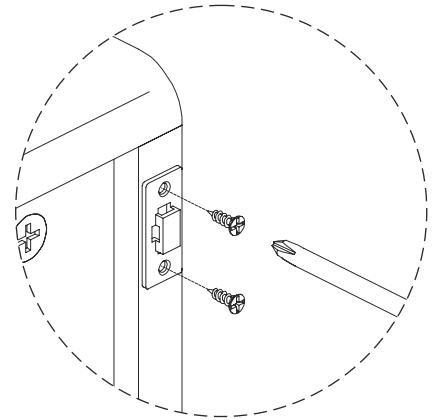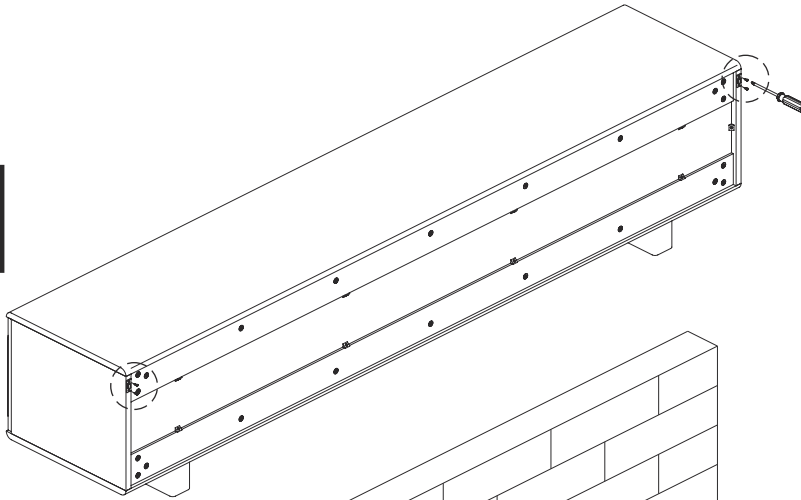  

2

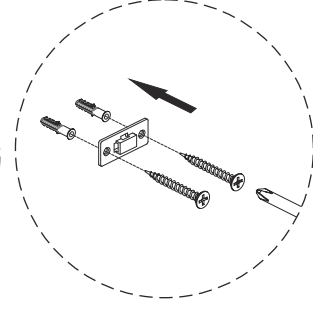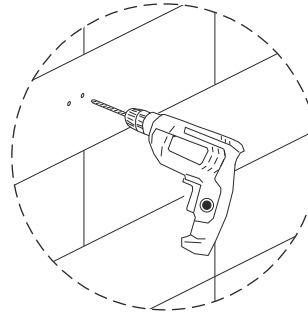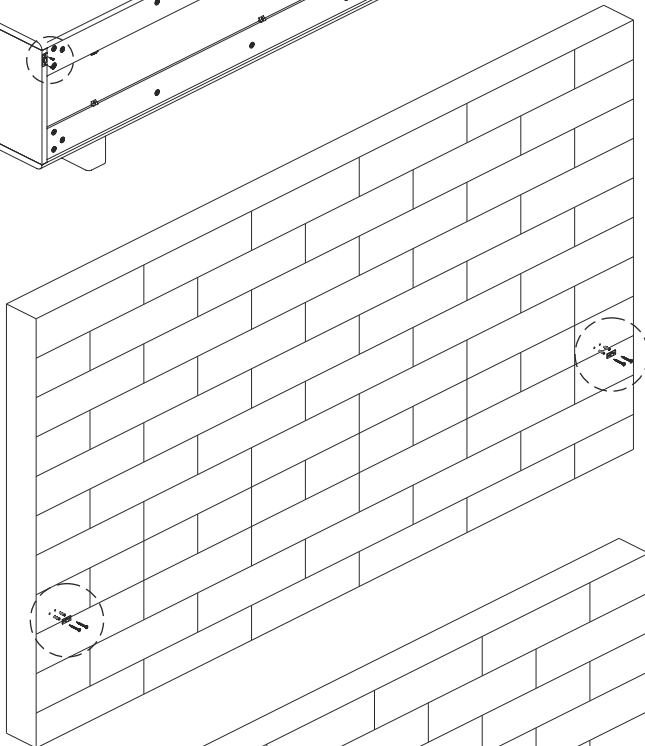   


3

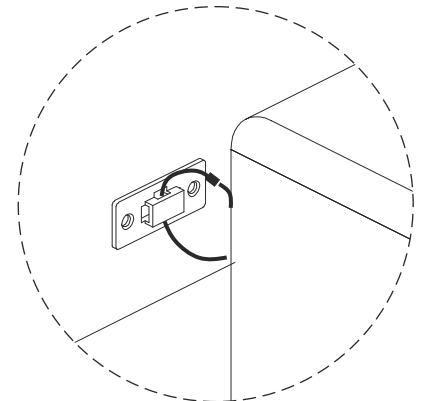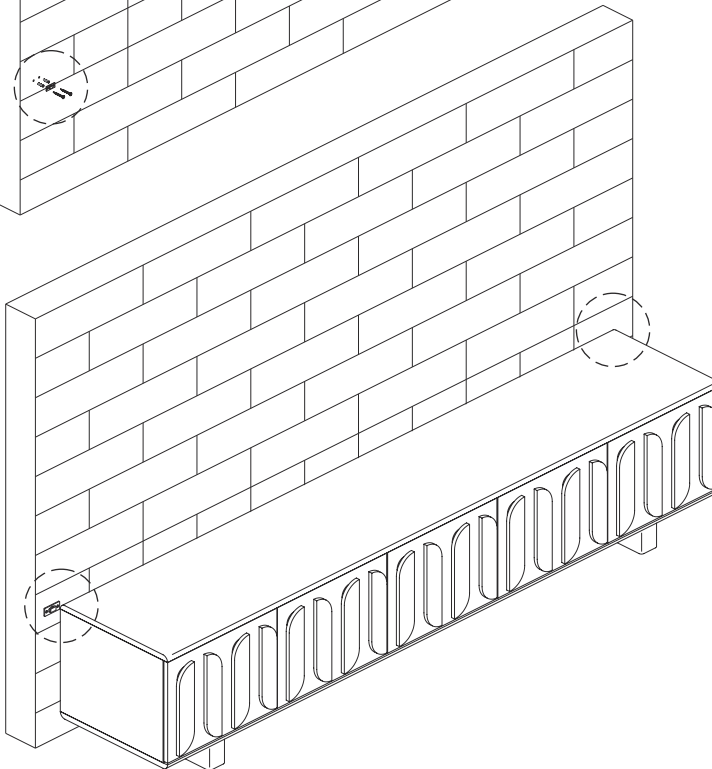  

YOU WILL NEED

 H


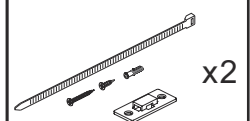


x2


ASSEMBLY STEPS

GREAT JOB. YOU'RE DONE!

  To move the assembled unit, please lift it up and do not drag to avoid damaging the middle part.

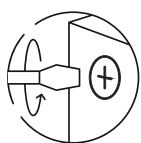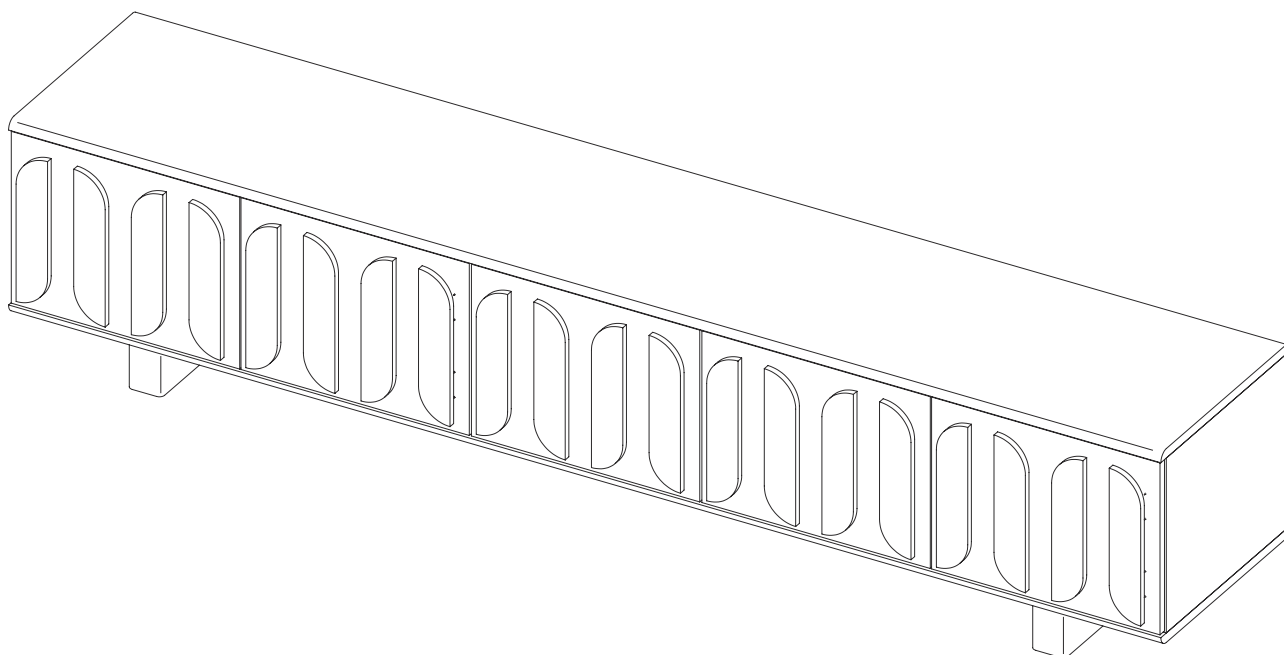

 When you assemble this TV Unit, please make sure all screws are fastened tightly. After one or two months, please recheck and make sure all screws are still tight.



The TV Unit top can hold weight of up to 60kg. Each shelf can hold weight of up to 15kg. We don't suggest over-loading them beyond their weight capacity.

CARE INSTRUCTION

Follow these basic steps to protect your furniture.

Clean Gently

Use a soft, damp cloth and mild soap solution to wipe down surfaces regularly.

Temperature and Humidity

Keep away from heat sources like stoves and heaters. Avoid direct sunlight and prolonged exposure to high humidity/water. Maintain a consistent room temperature and humidity level.

Use Furniture Pads

Place furniture pads or felt protectors under furniture legs to prevent scratches on floors

Avoid Excessive Weight


Don't overload the shelves or tabletop beyond their weight capacity.

***Again, we thank you for your purchase.
You've made our day, and we hope you have a great one too!
Enjoy our product!***

For any questions, please call us at 02 8999 1114 or contact our online customer service team through our website.

LUXO|Furniture

 WARNING

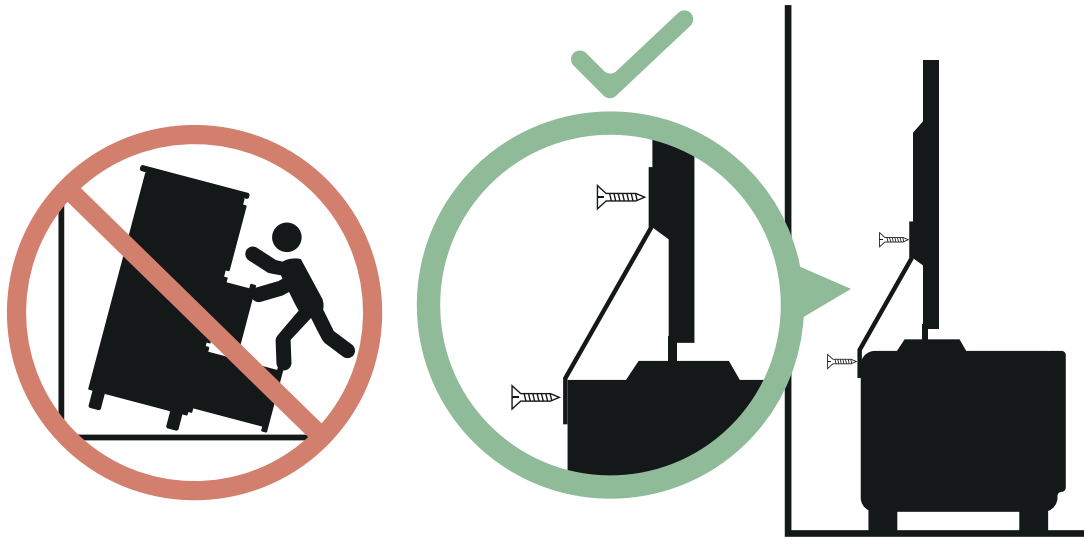

Children have died from furniture tipover.

- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **ALWAYS** secure your television with an anchor device or mount the television on a wall.

This is a permanent label. Do not remove!